

Quick Guide

ECL Comfort 110, application 116

(valid as of software version 1.08)

How to navigate?



- Adjust temperatures and values.
-
- Switch between menu lines.
-
- Select / return.
- 2 sec.
Return to daily user menu.

What do the symbols mean?



- The desired flow temperature is influenced by for example the return temperature.
- The actuator closes the control valve.
- The actuator opens the control valve.
- The actuator does not activate the valve.
- The pump is ON.
- The pump is OFF.
- The controller is in setback mode.
- The controller is in pre-setback mode (the symbol is blinking).
- The controller is in comfort mode.
- The controller is in pre-comfort mode (the symbol is blinking).

Daily use



- Adjust the temperature in the actual control mode.
-



- Choose mode:
- Auto, Comfort, Setback, Standby



- Schedules with start and stop times of the comfort periods for each of the weekdays:
- Monday, Tuesday, Wednesday, Thursday, Friday, Saturday, Sunday

- Maintenance
Press the button and hold for 2 sec.

Quick Guide

ECL Comfort 110, application 116

(valid as of software version 1.08)

Maintenance



Daily use
Press the button and hold for 2 sec



1000
Date - time



1000 Date - time

2000
Flow temp.



2177 Temp. min.
2178 Temp. max.

4000
Return T limit



4030 Limit
4035 Gain - max.
4036 Gain - min.
4037 Intgr. time

6000
Control param.



6173 Auto tuning
6174 Motor prot.
6184 Xp at 65 °C
6129 Xp at 90 °C
6185 Tn
6096 Tn (idle)
6186 M1 run
6187 Nz
6094 Open time
6095 Close time
6097 S2 (idle)

7000
Application



7022 P1 exercise
7023 M1 exercise
7077 P1 frost T
7078 P1 heat T
7093 Standby T
7141 Ext.
7189 Min. on time
7198 Daylight
7199 ECL address
7600 Type

8000
Service



8300 Code no.
8301 Ver.
8310 Backlight
8311 Contrast
8315 Language
8320 MOD address